

Setting the Panasonic HC-V10 Aspect Ratio for RVP



1. Place your camera in Record Mode by moving the switch located on the back of the camera to the right.

2. Open your viewfinder and press the Menu button in the top left corner.



3. In the menu, select "Record Setup" by highlighting it and pressing "Enter" in the bottom left corner.

4. Scroll down using the down arrow on the left panel until you highlight "REC MODE". Press Enter.



5. Now you see all of your record options. Scroll down to the bottom option, "640x480/60fps" and then press "Enter".

Setting the Panasonic HC-V10 Shutter Speed for RVP

1. Place your camera in Manual mode. On the left side, push the button labeled "iA/MANUAL". You'll know it's in Manual Mode if it says MNL in the upper left corner of the viewfinder.



2. Open up your camera's viewfinder and push the "Enter" button in the bottom left corner. You'll see a circular menu pop up in the bottom left.

3. Press the down arrow on the left panel of the viewfinder until you reach page 4/5 of the circular menu.





4. Push the right arrow towards "SHTR" to enter into manual shutter mode. From here, use the right and left arrows to increase and decrease the shutter speed as seen in the top left corner.

5. Exit the menu by pressing "Enter".

*Note: The higher the shutter speed, the less blur will show in your video and the darker your picture will appear. Every situation and environment is different, so RVP recommends that you slowly increase the shutter until it gets too dark and then step back one level.