


## Setting the Canon VIXIA HV40 Aspect Ratio for RVP

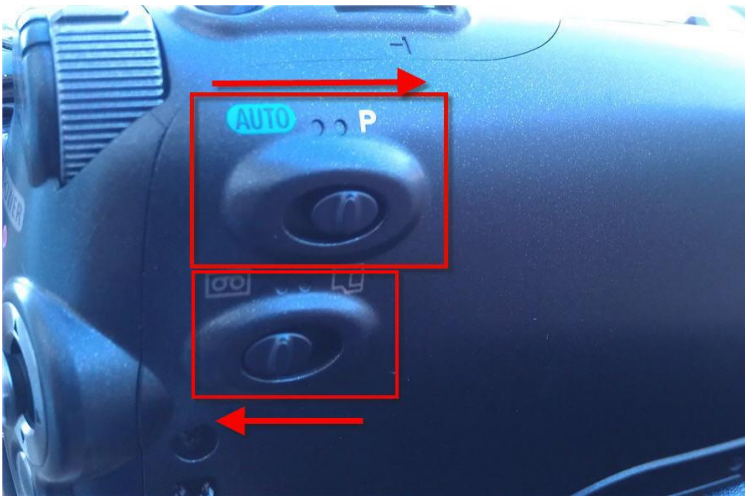

1. Place the camera in Program mode by moving the switch on the right side of the camera to "P". Also make sure the camera is in tape mode by moving the lower switch to the left.

2. Turn the camera on in Camera mode by rotating the top wheel to the left



3. Press the Function button on the back of your camera



4. Use the joystick above the Function button to scroll down to the Menu in the bottom left of the "L". Push the joystick in to select.



5. Scroll down to the 2nd option of the left and enter the menu for "HD Standard"



6. In HD Standard, scroll all the way down and select the correct aspect ratio:  
DV (Normal)

7. Press the Function button a few times to completely exit the menu and you're done!

## Adjusting the Shutter Speed



1. Press the Function button on the back of your camera

2. Scroll to the top left of the “L”-shaped menu where it says “P”. Then scroll right so that “Tv” is selected.



3. Exit the menu by pressing the “Func” button. You should now see a number in the top left corner of the view screen. Push the joystick up and down to increase and decrease shutter speed.



\*Note: The higher the shutter speed, the less blur will show in your video and the darker your picture will appear. Every situation and environment is different, so RVP recommends that you slowly increase the shutter until it gets too dark and then step back one level.